


Display

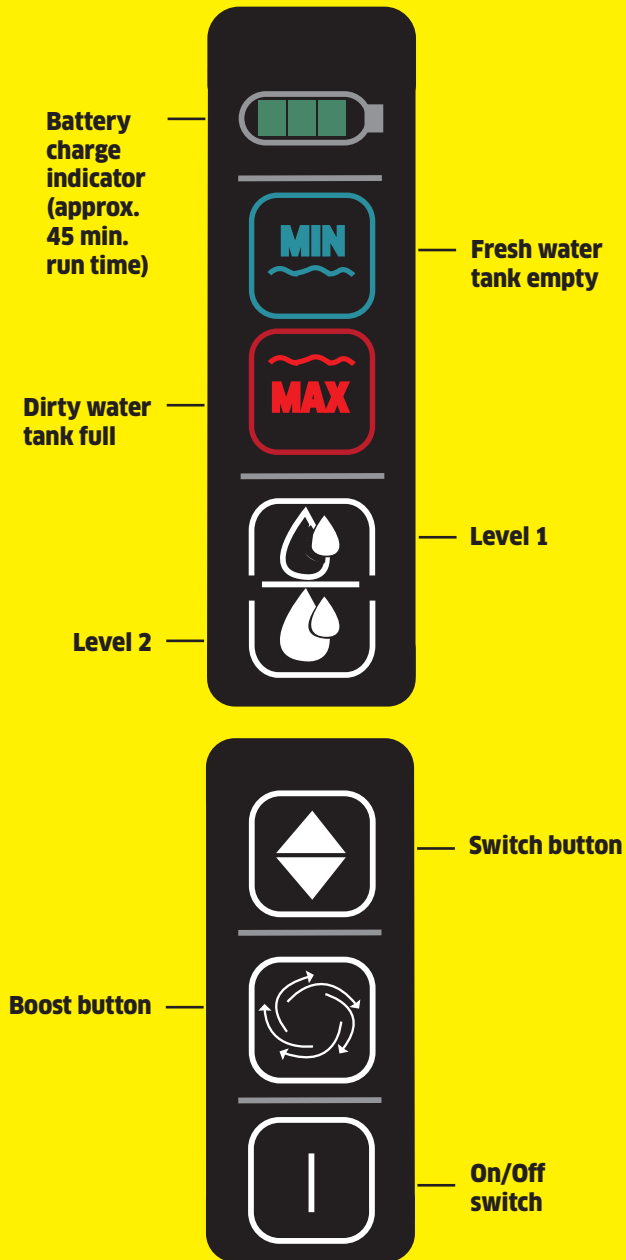

Scan code for videos




www.kaercher.com/fc7






KÄRCHER

FC 7 CORDLESS QUICKSTART GUIDE

First assembly

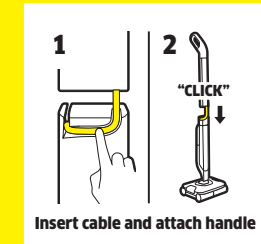

First steps before use

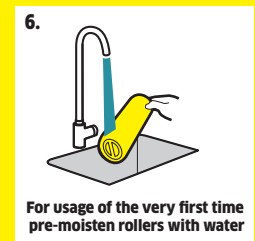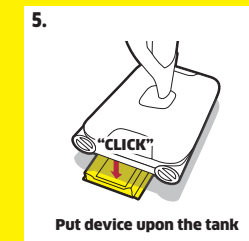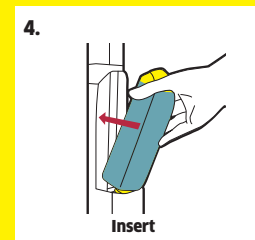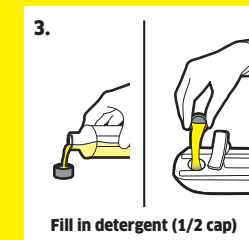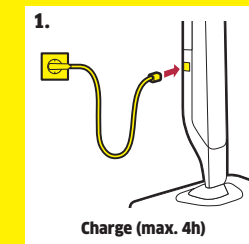



Switch cleaning mode



Activate boost function



Cleaning and storing

Step 1: Clean the device

-
-
-
-
-
-
-
-
-

Please wait about 2 min.

Step 2: Store the device

-
-
-
-
-
-
-
-
-
-



Refill fresh water tank

-
-
-
-
-



Empty dirty water tank

-
-
-
-
-